

TRAKTOR LE 2

- 1 Master Volume Adjust
- 2 Filter Adjust
SHIFT: Gain Adjust (Mixer)
- 3 Filter On
- 4 Monitor Mix Adjust
- 5 EQ (High/Mid/Bass Adjust + Kill)
- 6 Tempo Adjust
- 7 Seek position (Backward/Forward): 8 Beats
SHIFT: Seek position - 1 Beat
- 8 Tempo Bend (Down/Up)
SHIFT: Tempo Range Selector
- 9 Load Selected
- 10 Monitor Cue On
- 11 Jog Turn
- 12 Jog Touch/Scratch
- 13 Volume Adjust
- 14 Position
- 15 Sync On
- 16 Cue
- 17 Play/Pause (Deck Common)
SHIFT: Keylock On

Vinyl: Deck Layout


- 19 VU meters

-  Deck Post Fader Level (L+R)
-  Deck Pre-Fader Level (L+R)






- 20 Navigation / Browser

Folder Navigation

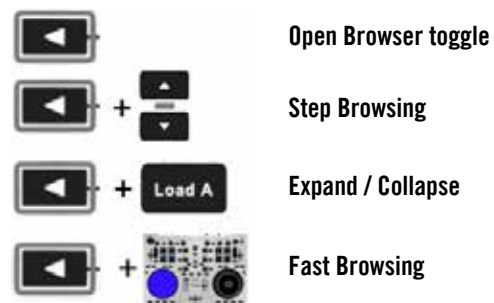


Playlist Navigation (Default)

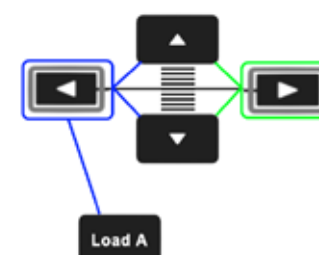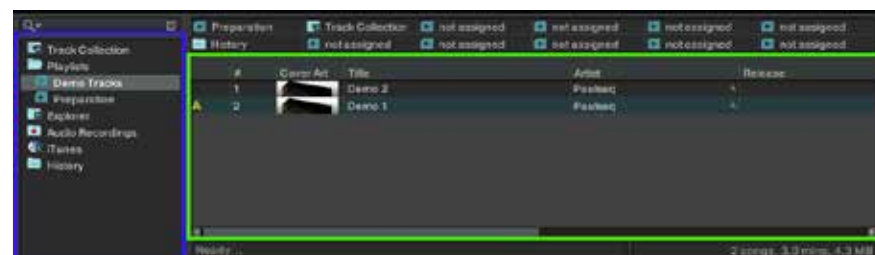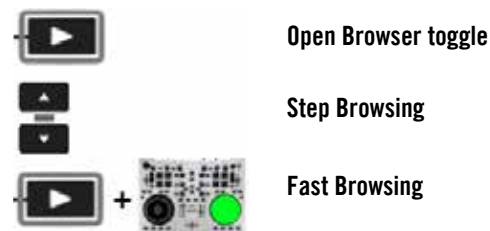

- 21 Pads

Loop

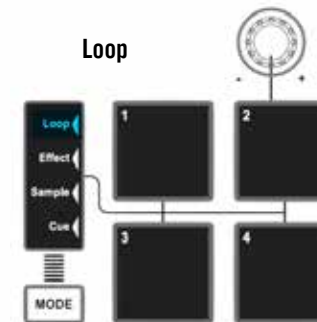

Duplicated on Sample mode

Loop Size Selector

- 1: Loop Set (In/Out)
- 2: Loop Size Select + Set (2 Beats)
- 3: Loop Size Select + Set (4 Beats)
- 4: Loop Size Select + Set (8 Beats)

Effect

Duplicated on CUE mode



Dry/Wet Adjust

- 1: Button 1 (FX unit)
- 2: Effect 1 Selector (+)
- 3: FX Unit 1 On/Off (Deck A) / FX Unit 2 On/Off (Deck B)
- 4: Effect 1 Selector (-)
- SHIFT + 1: Effect 1 amount

