


TRAKTOR PRO

- 1 FX Active**
SHIFT: Master
- 2 FX Active**
SHIFT: Snap
- 3 FX Active**
SHIFT: Quantize
- 4 FX Active**
SHIFT: LFO Rst.
- 5 Track Select**
Push to load
- 6 Decks A-D**
SHIFT: Cue
- 7 Dry/Wet**
SHIFT: Adv. FX Select
- 8 FX Parameter 1**
SHIFT: Chained FX Select 1
- 9 FX Parameter 2**
SHIFT: Chained FX Select 2
- 10 FX Parameter 3**
SHIFT: Chained FX Select 3

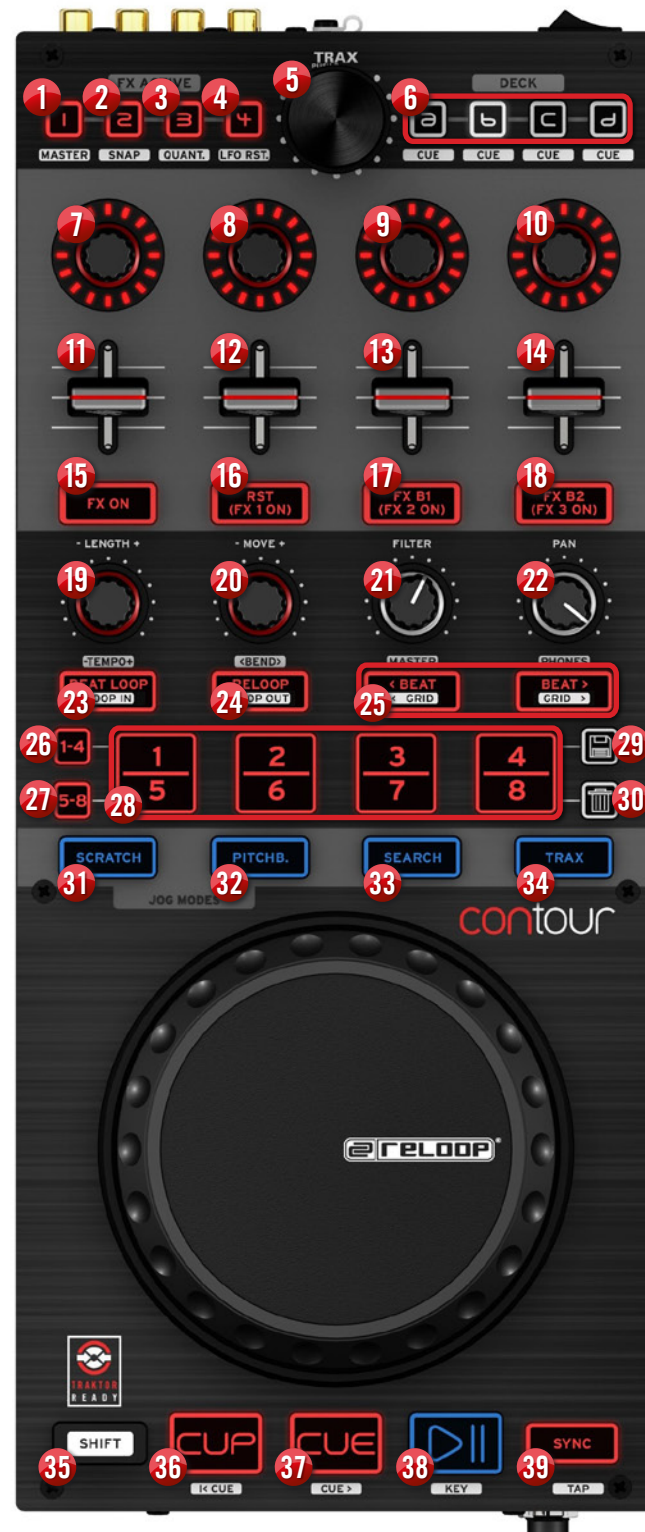

- 11 Dry/Wet**
- 12 FX Parameter 1**
- 13 FX Parameter 2**
- 14 FX Parameter 3**
- 15 Advanced FX On**
- 16 FX Reset/Chained FX 1 On**
- 17 FX Button 1/Chained FX 2 On**
- 18 FX Button 2/Chained FX 3 On**
- 19 Loop Length**
SHIFT: Tempo
- 20 Move**
SHIFT: Tempo Bend
- 21 Filter**
SHIFT: Headphones Volume
- 22 Pan**
SHIFT: Master Volume
- 23 Beat Loop**
SHIFT: Loop in
- 24 Reloop**
SHIFT: Loop out
- 25 Beat Jump**
SHIFT: Grid Move
- 26 Hotcue 1-4**
- 27 Hotcue 5-8**
- 28 Hotcue 1-8**
- 29 Save Hotcue**
- 30 Delete Hotcue**
- 31 Scratch**
- 32 Pitchbend**
- 33 Search**
- 34 Browser Toggle**
- 35 Shift**
- 31 CUP**
SHIFT: Jump to beginning of the track
- 32 CUE**
SHIFT: Jump to next cue point
- 33 Play/Pause**
SHIFT: Key
- 34 Sync**
SHIFT: Tap