

TRANSPORT CONTROL

Start playback	
Restart playback	+
Punch out while recording	
Start recording	
Punch in while playback is running	
Enable/disable count-in	+
Stop playback/recording at current position	
Relocate playhead position to song start when stopped	
Scroll playhead position	
Enable/disable loop mode	
Move loop by its own length	+
Enable/disable metronome	
Tap tempo	

EDIT CONTROL

Undo action	
Redo action	+
Quantize to grid value	
Toggle automation between Read mode and Touch mode	

MUTE/SOLO

Mute/unmute selected track	
Solo/unsolo selected track	

NAVIGATION

 
Select previous/next track	
Select previous/next region	

MIXER CONTROL


Mute/unmute track	+
Solo/unsolo track	+
Jump to track	
Select previous/next track	
Switch bank	
Set Knob 1-8 to control panorama	+
Set Knob 1-8 to control volume	+
Coarse adjust panorama/ volume of selected track	
Fine adjust panorama/ volume of selected track	+

TRANSPORT CONTROL

Start playback




Restart playback/recording

 

Start Clip recording




Scroll playhead position

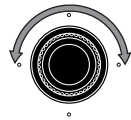

Start Arranger recording



 
Stop playback/recording at current position



Relocate playhead position to song start when stopped



 
Enable/disable loop mode



Enable/disable metronome



 Tap tempo



EDIT CONTROL

 
Undo action



Redo action



Quantize to grid value




Toggle automation for selected Track on/off




ARRANGER CONTROL

 Select Tracks



Select Clip Slot in Track

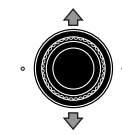

Start/stop selected Clip



Mute/unmute selected Track



Solo/unsolo selected Track



MIXER CONTROL

 
Mute/unmute Track




Solo/unsolo Track



Jump to Track



Scroll Tracks

 

Switch bank



Set Knob 1-8 to control panorama



Set Knob 1-8 to control volume



Coarse adjust panorama/volume of selected Track



Fine adjust panorama/volume of selected Track



TRANSPORT CONTROL

Start/pause playback	
Punch out while recording	
Start recording	
Punch in while playback is running	
Enable/disable count-in	+
Stop playback/recording at current position	
Relocate playhead position to song start when stopped	
Scroll playhead position	
Enable/disable loop mode	
Move loop by its own length	+
Enable/disable metronome click	
Tap tempo	

EDIT CONTROL

Undo action	
Redo action	+
Quantize to 16th notes	
Enable/disable automation write	

MUTE/SOLO

Mute/unmute selected track	
Solo/unsolo selected track	

NAVIGATION

Select previous/next track	
Select previous/next Region	

MIXER CONTROL

Mute/unmute track	+
Solo/unsolo track	+
Jump to track	
Select previous/next track	
Show master output channel	+
Switch bank	
Set Knob 1–8 to control panorama	+
Set Knob 1–8 to control volume	+
Coarse adjust panorama/volume of selected track	
Fine adjust panorama/volume of selected track	+