

TRANSPORT CONTROL

| | |
|---|---|
| Start playback | |
| Restart playback | + |
| Punch out while recording | |
| Start recording | |
| Punch in while playback is running | |
| Enable/disable count-in | + |
| Stop playback/recording at current position | |
| Relocate playhead position to song start when stopped | |
| Scroll playhead position | |
| Enable/disable loop mode | |
| Move loop by its own length | + |
| Enable/disable metronome | |
| Tap tempo | |

EDIT CONTROL

| | |
|--|---|
| Undo action | |
| Redo action | + |
| Quantize to grid value | |
| Toggle automation between Read mode and Touch mode | |

MUTE/SOLO

| | |
|----------------------------|--|
| Mute/unmute selected track | |
| Solo/unsolo selected track | |

NAVIGATION


| | |
|-----------------------------|--|
| Select previous/next track | |
| Select previous/next region | |

MIXER CONTROL


| | |
|--|---|
| Mute/unmute track | + |
| Solo/unsolo track | + |
| Jump to track | |
| Select previous/next track | |
| Switch bank | |
| Set Knob 1-8 to control panorama | + |
| Set Knob 1-8 to control volume | + |
| Coarse adjust panorama/ volume of selected track | |
| Fine adjust panorama/ volume of selected track | + |

TRANSPORT CONTROL

Start playback

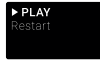


Restart playback/recording

 

Start Clip recording




Scroll playhead position

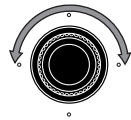


Start Arranger recording



 Stop playback/recording at current position



 Relocate playhead position to song start when stopped



Enable/disable loop mode



Enable/disable metronome



Tap tempo



EDIT CONTROL

Undo action



Redo action



Quantize to grid value

 


Toggle automation for selected Track on/off




ARRANGER CONTROL

Select Tracks



Select Clip Slot in Track

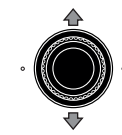

Start/stop selected Clip



Mute/unmute selected Track



Solo/unsolo selected Track



MIXER CONTROL

 
Mute/unmute Track




Solo/unsolo Track



Jump to Track



Scroll Tracks

 


Switch bank



Set Knob 1-8 to control panorama



Set Knob 1-8 to control volume

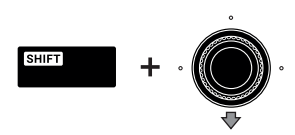

Coarse adjust panorama/volume of selected Track



Fine adjust panorama/volume of selected Track



TRANSPORT CONTROL

| | |
|---|---|
| Start/pause playback | |
| Punch out while recording | |
| Start recording | |
| Punch in while playback is running | |
| Enable/disable count-in | + |
| Stop playback/recording at current position | |
| Relocate playhead position to song start when stopped | |
| Scroll playhead position | |
| Enable/disable loop mode | |
| Move loop by its own length | + |
| Enable/disable metronome click | |
| Tap tempo | |

EDIT CONTROL

| | |
|---------------------------------|---|
| Undo action | |
| Redo action | + |
| Quantize to 16th notes | |
| Enable/disable automation write | |

MUTE/SOLO

| | |
|----------------------------|--|
| Mute/unmute selected track | |
| Solo/unsolo selected track | |

NAVIGATION

| | |
|-----------------------------|--|
| Select previous/next track | |
| Select previous/next Region | |

MIXER CONTROL

| | |
|---|---|
| Mute/unmute track | + |
| Solo/unsolo track | + |
| Jump to track | |
| Select previous/next track | |
| Show master output channel | + |
| Switch bank | |
| Set Knob 1–8 to control panorama | + |
| Set Knob 1–8 to control volume | + |
| Coarse adjust panorama/volume of selected track | |
| Fine adjust panorama/volume of selected track | + |