 
 

 











 







TRANSPORT CONTROL

Start playback	
Restart playback/recording	
Start Clip recording	
Scroll playhead position	
Start Arranger recording	 + 
Stop playback/recording at current position	
Relocate playhead position to song start when stopped	
Enable/disable loop mode	
Enable/disable metronome	
Tap tempo	





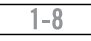
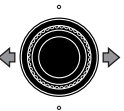









EDIT CONTROL

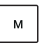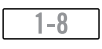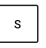Undo action	
Redo action	 + 
Quantize to grid value	
Toggle automation for selected Track on/off	

ARRANGER CONTROL


Select Tracks	
Select Clip Slot in Track	
Start/stop selected Clip	
Mute/unmute selected Track	
Solo/unsolo selected Track	

MIXER CONTROL

Mute/unmute Track	 + 
Solo/unsolo Track	 + 
Jump to Track	
Scroll Tracks	
Switch bank	 
Set Knob 1-8 to control panorama	 + 
Set Knob 1-8 to control volume	 + 
Coarse adjust panorama/volume of selected Track	 1-8
Fine adjust panorama/volume of selected Track	 +  1-8

TRANSPORT CONTROL

 Start/pause playback



Start recording



Punch in while playback is running



 
Enable/disable count-in



Stop playback/recording at current position



Scroll playhead position



Enable/disable loop mode



Move loop in one bar increments



Enable/disable metronome click



EDIT CONTROL

Undo action



Redo action



Quantize to 16th notes



Enable/disable automation write



MUTE/SOLO

Mute/unmute selected track




Solo/unsolo selected track




NAVIGATION

Select previous/next track

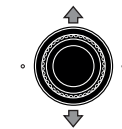

Select previous/next Region

 

MIXER CONTROL

Mute/unmute track



 
Solo/unsolo track



Jump to track



Select previous/next track



Show master output channel



Switch bank



Set Knob 1–8 to control panorama



Set Knob 1–8 to control volume



Coarse adjust panorama/volume of selected track



TRANSPORT CONTROL

Start playback	
Restart playback	+
Punch out while recording	
Start recording	
Punch in while playback is running	
Enable/disable count-in	+
Stop playback/recording at current position	
Relocate playhead position to song start when stopped	
Scroll playhead position	
Enable/disable loop mode	
Move loop by its own length	+
Enable/disable metronome	
Tap tempo	

EDIT CONTROL

Undo action	
Redo action	+
Quantize to grid value	
Toggle automation between Read mode and Touch mode	

MUTE/SOLO

Mute/unmute selected track	
Solo/unsolo selected track	

NAVIGATION

Select previous/next track	
Select previous/next region	

MIXER CONTROL

Mute/unmute track	+
Solo/unsolo track	+
Jump to track	
Select previous/next track	
Switch bank	
Set Knob 1-8 to control panorama	+
Set Knob 1-8 to control volume	+
Coarse adjust panorama/ volume of selected track	
Fine adjust panorama/ volume of selected track	+

TRANSPORT CONTROL

Start playback



 
Stop playback



Activate/deactivate recording



Move playback start point



Move timeline selection



Activate/deactivate loop



Activate/deactivate click



Activate/deactivate count in



EDIT CONTROL

Undo



Redo




MUTE/SOLO

Mute selected track




NAVIGATION

Select previous/next track

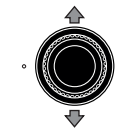

MIXER CONTROL

 Select previous/next track



Select track



Move mixer bank



Mute track



Solo track



Set knobs to control volume



Set knobs to control pan



Adjust volume/pan for selected track

