












 

 







 
## PROJECT VIEW

- Jump back to Project View 
- Show next / previous eight Groups 
- Show next / previous Group  + 
- Navigate Pattern View by eight Patterns 
- Navigate Pattern View by one Pattern  + 
- Show Master output, Group output, external input, or CUE level on level meters    
 
- Navigate between Scene Banks  + 
- Set loop between two Scenes  + 
- Create a loop in between Scenes  + 
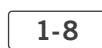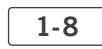
## BROWSE

- Scroll the result list in steps of ten entries  + 
- Load next / previous preset  + 

Set favorites



Restore a previous filter




Reset and jump to the beginning



## STEP


Select the number of Sounds you want to sequence in STEP mode

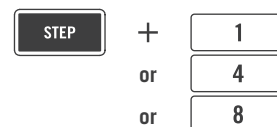

Navigate through Pattern Pages



 Jump to a specific Pattern Page



Jump to a specific Pattern Page Bank



Activate Pattern Follow




You can erase events of a specific Sound (PAD MODE) or notes of the same pitch (KEYBOARD) under the playhead.



## PAT LENGTH

Press any click-pad on the 8x8 click-pad Matrix to set the length of your Pattern in bars...

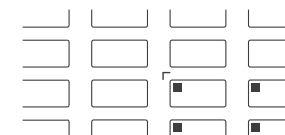


...or use the Encoder to set the length of your Pattern.



## GRID

 Choose between common Pattern Grid settings



## PIANO ROLL

One octave up / down

 


One semitone up / down



## ARP

Choose an ARP preset by pressing one of the Scene click-pads.



## VARIATION

Apply VARIATION settings



## KEYBOARD

Show next / previous eight Groups



Show next / previous Group



## NOTES

Select a NOTES mode




... Add notes on the 8x8 click-pad Matrix to each of your NOTES modes. Edited modes will be saved with the Project / Group.

## MACRO / CONTROL

While holding the MACRO or CONTROL click-pad:

- Show Macros or Controls for Sounds on the Smart Strips

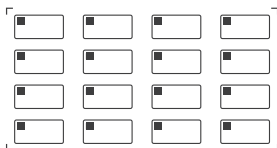

- Show Macros or Controls for Groups on the Smart Strips



- Show Macros or Controls for Master on the Smart Strips



... The flashing LED indicates the focused Sound, Group or the Master and their respective controls on the Smart Strips.

Navigate through plug-in slots



Show next / previous parameter page



## LEVEL / AUX / TUNE / SWING

While holding the LEVEL-, AUX-, TUNE-, or SWING-click-pad:

 
- Show LEVELS, AUX levels, Tune or Swing for Sound 1-8 on the Smart Strips



- Show LEVELS, AUX levels, Tune or Swing for Sound 9-16 on the Smart Strips



Hold SHIFT + LEVEL to show the panning for either the Groups or the Sounds on the Smart Strips.



Hold SHIFT + AUX to show AUX 2 for either the Groups or the Sounds on the Smart Strips.




Show next / previous eight Sounds



## LOCK

 Create different LOCK states and recall them on the 8x8 click-pad Matrix




... Enable morphing between the different LOCK states in the on-screen-overlay. You can also edit each state when selecting the corresponding click-pad.

## GLOBAL FUNCTIONS

 Hold SHIFT to fine edit parameter values. This also applies to some on-screen overlay parameters.



Clear modulation from a specific parameter



While holding MACRO, LEVEL, AUX, CONTROL, TUNE, or SWING, double tap on a Smart Strip to reset the parameter to default.



Switch between current and toggle behavior (e.g. MUTE, SOLO).

